
# L110H, L120H

Volvo Wheel Loaders 18-21.6 t 260-276 hp

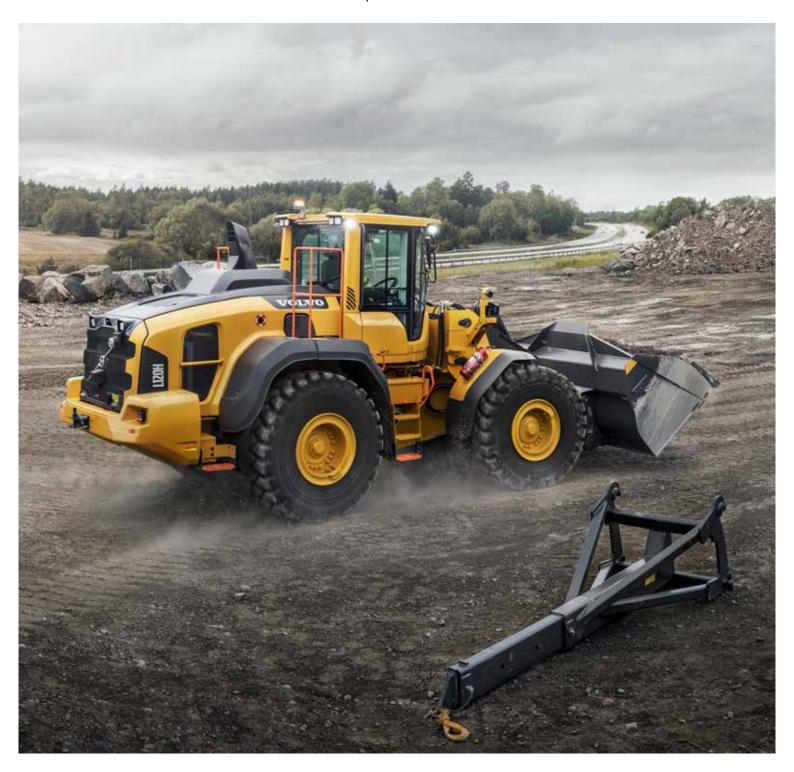

#### Progress is in our DNA

Since introducing our first wheel loader, Volvo has continued to refine its concept for more than half a century. Over the years, we have revolutionized our machines, bringing customers unparalleled productivity and efficiency.

1954

The world's first wheel loader to feature a parallel lift arm system and attachment bracket with quick coupler – the H-10

1973

The first wheel loader with direct injected turbo engine – Volvo BM 1641

Volvo introduced the world's first truly low-emission diesel engines in construction equipment (1974) 1981

Volvo introduced the world's first automatic gear shifting system (Automatic Power Shift) and load sensing hydraulic technology 1988

Comfort Drive Control

1990

Boom suspension system

Volvo patented Torque Parallel linkage (1991)

# SMARTER, STRONGER, FASTER

The new H-series L110 and L120 may boast the same striking design as their forerunners, but these machines have been updated with the latest innovative technology, promoting greater productivity and fuel efficiency. Ready to tackle a range of applications, enjoy the same reliability and quality you'd expect from your Volvo wheel loader and more.

2009

Volvo sets the standard for the attachment bracket (ISO 23727) 2010

OptiShift

CareTrack

2016

Load Assist, powered by the award-winning Volvo Co-Pilot 2017

New generation OptiShift

#### With you for the long run

As your trusted partner in production, Volvo is here to support you with the best equipment for the job. Boasting a comprehensive portfolio of attachments designed to complement your machines performance, as well as a range of services to boost your profitability, we'll help you tailor the perfect package to suit your business needs.



# **Smarter operation**

Engineered for efficient and smart work, the innovative L110H and L120H wheel loaders combine the latest Volvo technology with power and upgraded features, resulting in 20% greater fuel efficiency than the G-series.

#### New generation OptiShift

For improved cycle times and greater fuel efficiency, customize the lock-up engagement of your machine, with new generation OptiShift. The improved technology integrates the Reverse By Braking function and the new torque converter with lock-up, creating a direct drive between the engine and transmission.



#### Reverse By Braking

Extend the life of your machine's components and increase operator comfort with Reverse By Braking (RBB) – patented by Volvo. The braking function slows the machine when the operator wants to change direction, by reducing engine rpm and automatically applying the service brakes, reducing stress on the drivetrain.



#### Power up, fuel down


Built on decades of experience and featuring the most advanced technology, the powerful Volvo engine delivers high torque at low rpm, for superior performance.



#### Eco pedal

Save on machine wear and increase fuel efficiency with the eco pedal. Uniquely designed by Volvo, the eco pedal encourages economical operation, by applying a mechanical push-back force in response to excess use of the accelerator.



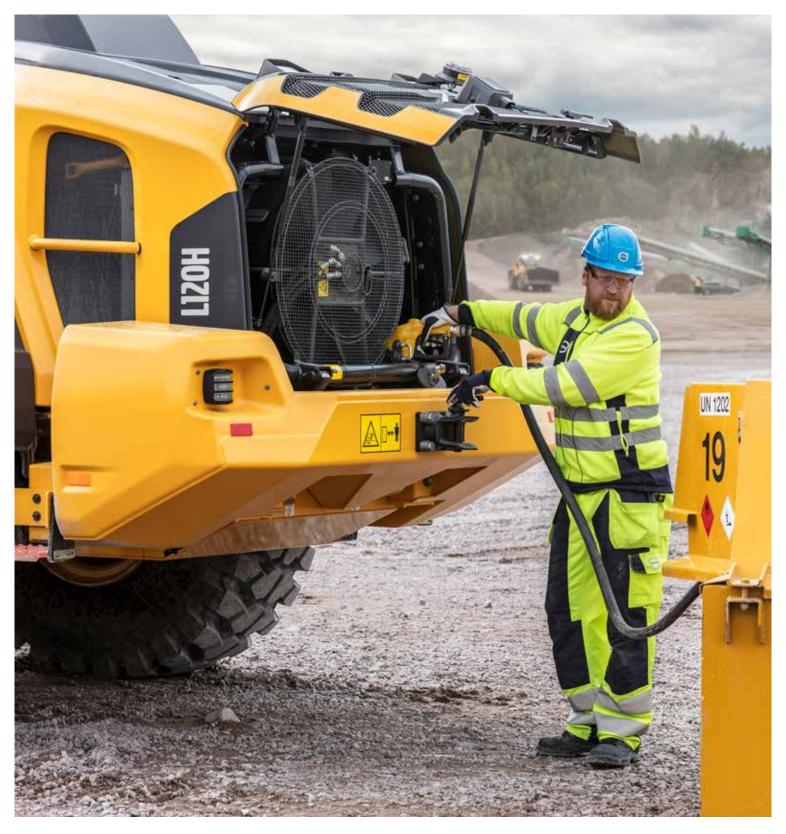

# UP TO 20% GREATER FUEL EFFICIENCY

Do more with less fuel, the H-series machine updates offer up to 20% greater fuel efficiency than the G-series. Contributing to the increase is the powerful engine, second generation OptiShift – which can be optionally integrated – attachment optimization and the new dry P-Brake, which eliminates drag losses.



"The machines are productive and very durable, especially when working non-stop in our climate, which is tough during winter months." Leszek Kardaszynski, Director of logistics and investment, UNIKOST (Poland)



# LOAD ASSIST

Unlock the full potential of your machine's productivity with Load Assist, a dynamic load weighing system up to 1% accuracy. Powered by the 10" Volvo Co-Pilot touchscreen, the system enables you to monitor the amount of material moved and easily manage work orders – the data can then be stored and accessed remotely. In addition, you can track your machine's fuel efficiency with the help of CareTrack.

### Made to move

Boosting productivity by up to 5% – in comparison to the G-series – the L110H and L120H are fitted with a new transmission and improved technology. Enhanced by Load Assist and CareTrack, the intelligent systems offer valuable insight about your operations, reducing fuel consumption and cycle times.

#### Boost your productivity by up to 5%

The H-series machine updates offer up to 5% greater productivity than the G-series. For ultimate stability and high efficiency, the L110H and L120H have been upgraded with a new transmission, which works in harmony with the engine and axels. The new converter delivers increased torque output, resulting in better performance at low speeds. For faster acceleration and smooth operation, the steps between gears have been reduced.



#### Comfortably productive

Customize your machine and ensure precise control of hydraulic functions, with the choice of single or multi levers. To get the most out of each operation, select from three hydraulic modes, according to your preferred responsiveness.



#### **Bucket leveling function**

Take your productivity to the next level with the new bucket leveling function. Automatically return the bucket to level from both dump and curl positions, enhancing operator performance.



# Loaded for versatility

Get the most out of your wheel loader with a range of purpose built attachments. Form one solid and reliable unit, with attachments that are ideally matched by size and design to your machine's parameters – including link-arm geometry, breakout and lifting forces. And if we don't have the right attachment, Volvo can custom build one to your specific requirements.

#### Fork applications

Take your pick from a range of Volvo forks, offering stability and good visibility. Achieve precise control and ultimate productivity, thanks to the reach and parallel lift-arm action of the loader unit, offering the perfect combination with fork attachments.



#### Rehandling

Experience up to 5% greater productivity with a new range of Volvo Rehandling buckets. The redesigned buckets are easier to fill and minimize spillage, thanks to new convex sides and the improved spill guard. To prevent spillage and absorb shocks, opt for the Boom Suspension System, which automatically engages, depending on gear or speed selection.



#### Waste and recycling


Put waste in its place with a full line of dedicated attachments and machine configurations. Designed specifically for waste handling, the robust attachments will ensure efficient and productive operation.



#### Log handling

Designed for high lifting force and tilt out force, and offering maximum stability in log handling applications, select from a choice of general purpose grapples, sorting grapples and unloading grapples.



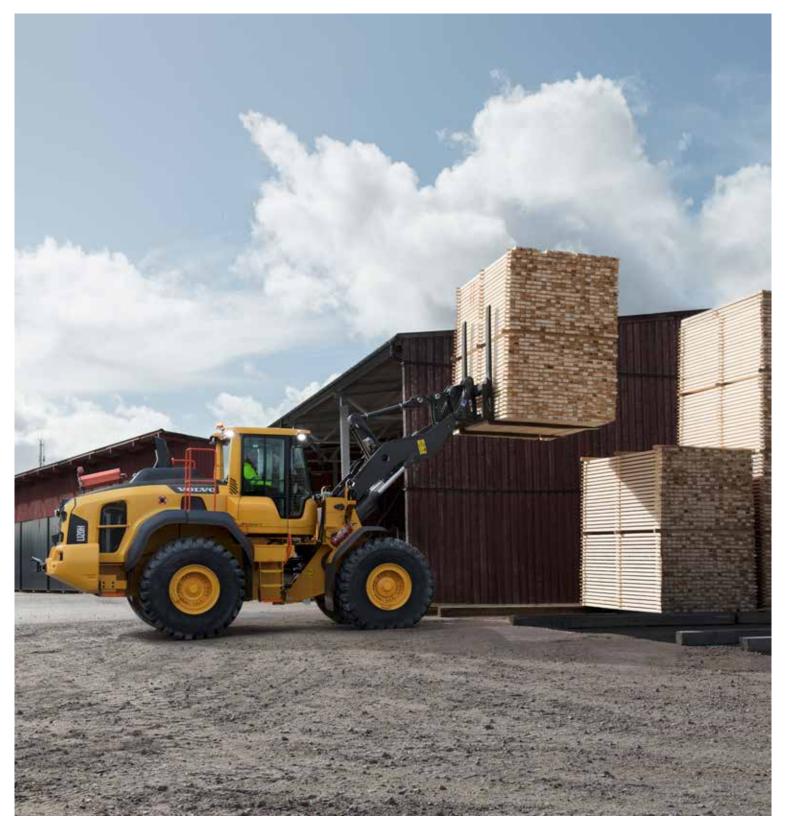

# TORQUE PARALLEL LINKAGE

For strength in demanding applications, Volvo's unique Torque Parallel (TP) linkage provides high breakout torque and ultimate parallel movement throughout the entire lifting range. The linkage offers stability during loading and carrying and allows easy filling of the buckets. For long lasting performance, the lifting arm has double sealing on each of the pins.

# Intelligently productive

#### **UP TO 20% GREATER FUEL EFFICIENCY**

- New generation OptiShift
- New dry P-brake
- Eco pedal
- Reverse By Braking (RBB)
- Matched Volvo attachments



### **BOOST YOUR PRODUCTIVITY BY UP TO 5%**

- New transmission and gear ratio
- Choice of single or multi levers
- Choice of three hydraulic modes
- Bucket leveling function
- Load Assist




#### HERE TO SUPPORT YOU

- Genuine Volvo Parts
- Operator training
- Proactive Monitoring

#### • Unique Torque Parallel linkage

- New Rehandling bucket up to 5% greater productivity
- Fork attachments
- Waste and recycling
- Log handling
- Custom built attachments

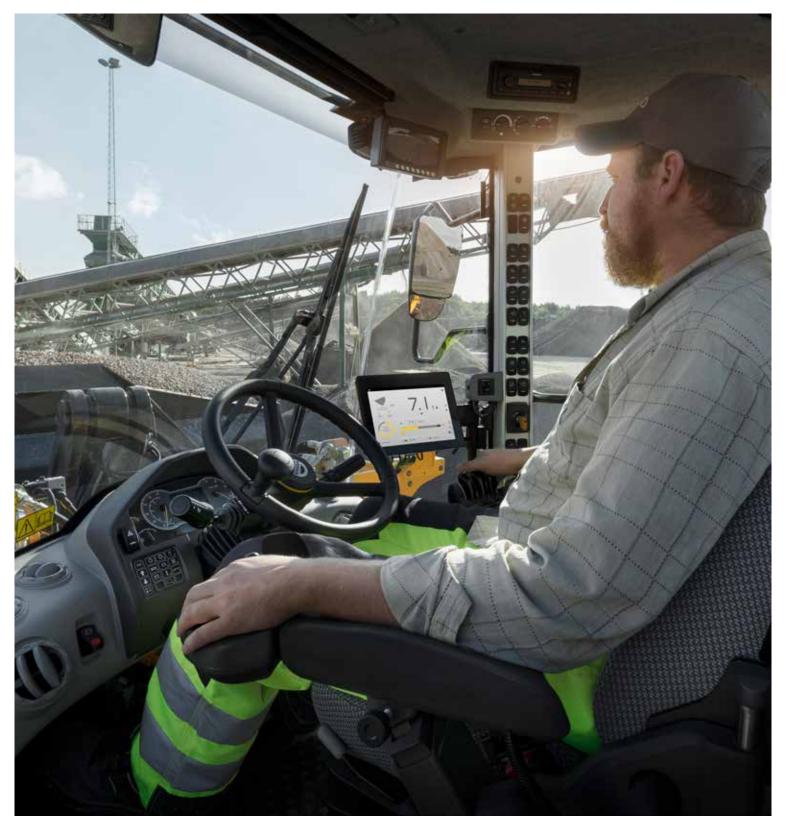

# THE OPERATOR'S CHOICE

Operate in comfort from the best cab on the market, the Volvo cab can be equipped with a new adjustable seat. Access the cab safely and effortlessly using the steps and open the door with ease, thanks to the optional remote-control opener.

# Perfect your performance

Built with the customer, for the customer, the L110H and L120H boast a range of features to enhance operator performance. For increased productivity, the Volvo cab can be customized to your preference and additional cameras offer greater visibility.

#### Visibility

To enhance visibility, the H-series wheel loaders have new rearview mirrors and can be equipped with a rear-view camera. Optimized by the radar detect system, which works with the camera to give a visual and audible alert to the operator of unseen on-coming objects. Orange handrails and steps have been placed on the machine, intended to stand out to the operators and maintenance staff.



#### **Comfort Drive Control**

To reduce operator fatigue and improve productivity, Comfort Drive Control can be optionally integrated into your machine. The smart function gives you the opportunity to steer the machine from a small lever – particularly effective for fast-paced truck loading operations.



#### Operator training

Increase productivity and reduce fuel consumption by learning how to operate your wheel loader in the most efficient way. Volvo offers operator training, which encompasses the best practices in the industry.



# Maximize your uptime

Offering strength in demanding applications, the L110H and L120H are built to last. Maintain the life of your machines with simple serviceability and proactive dealer support, as well as flexible maintenance and repair plans.

#### Durable by design

Designed with durability in mind, the H-series wheel loaders are built with a strong frame structure, ideally-matched to Volvo powertrain. The hydraulically-driven cooling fan regulates component temperature and can be automatically reversed to permit self-cleaning of the cooling units. For long service life, the brakes are outboard mounted and the front and rear axles are cooled by the oil circulation.



#### **Proactive Monitoring**

Keep your machine moving with Proactive Monitoring. Volvo monitors machine health remotely, from our very own Uptime Center, helping to predict potential failures before they occur. This gives you more time to focus on your operation, helping to reduce unplanned downtime and minimize repair costs.



#### Here to support you

Maintain productivity and machine uptime with our range of readily available Genuine Volvo Parts, all backed by Volvo warranty. We're here to help you stay on track, offering flexible maintenance and repair plans.




#### Slidable cooler installation

The cooler installation slides out, for ease and speed of cleaning.





"After deciding to buy our first Volvo machine, we couldn't be more pleased with the results. Not only is the fuel economy great, more importantly, so is the customer service, which has helped us to keep machine downtime to a minimum." Wade Englesby, Operations Manager, Tervita Metals Recycling (Canada)

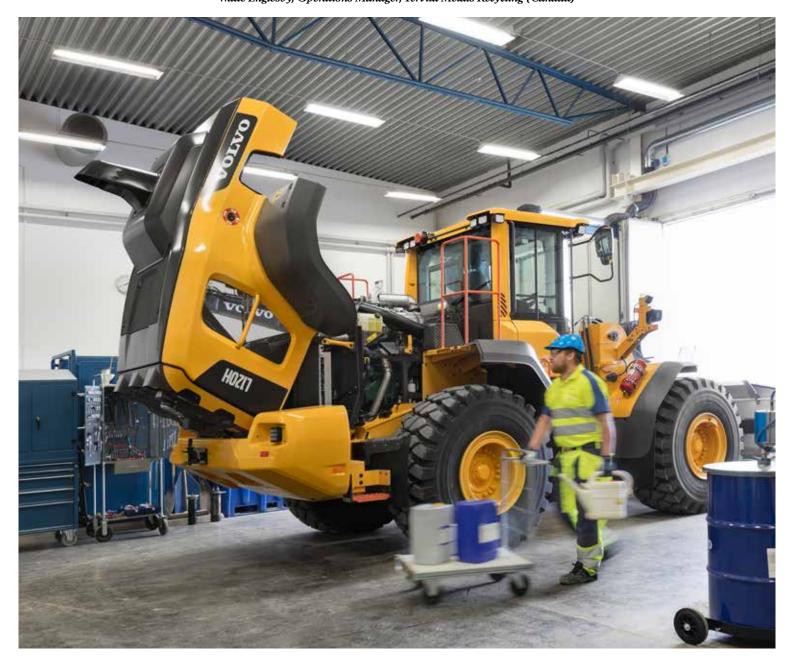

# INDUSTRY LEADING SERVICEABILITY

For simple serviceability, the engine hood is operated electronically. Stay one step ahead and check the condition of your brakes using the brake wear indicators, placed on the wheels. To prevent dirt and moisture from entering components, each has replaceable breather filters, located remotely.

### Volvo L110H, L120H in detail


#### **Engine**

The engine is a straight six cylinder, four stroke, turbo charged diesel engine with direct injection and charge air cooler. The engine meet EU Stage V emission requirements. The engine uses a common rail fuel system controlled by the engine control module (ECM). Engines with ACT (advanced combustion technology) feature split injection and turbocharger with mechanical wastegate. The exhaust after treatment system (EATS) is equipped with a diesel oxidation catalyst (DOC), a diesel particulate filter (DPF) and a SCR system to reduce emissions. Cooled exhaust gas recirculation (EGR) also reduces emissions.


#### L110H

L110H		
Engine	Volvo	D8J
Max. power at	r/min	1800
ISO 14396 gross	kW	191
	hp	260
ISO 9249, SAE J1349 net	kW	190
	hp	258
Max. torque at	r/min	1 450
SAE J1995 gross	Nm	1 255
ISO 9249, SAE J1349 net	Nm	1 250
Economic working range	r/min	850 - 2 100
Displacement	1	7.8
L120H		
Engine	Volvo	D8J
Max. power at	r/min	1 500
ISO 14396 gross	kW	203
	hp	276
ISO 9249, SAE J1349 net	kW	203
	hp	276
Max. torque at	r/min	1 450
SAE J1995 gross	Nm	1 320
ISO 9249, SAE J1349 net	Nm	1 317
Economic working range	r/min	850 - 2 100
Displacement	1	7.8

#### L110H

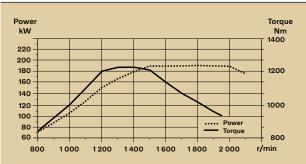

#### L120H

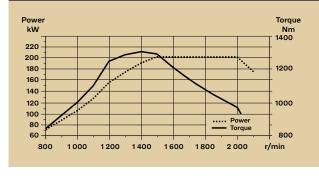

#### Drivetrain

Torque converter: Single-stage.

**Transmission:** Volvo countershaft transmission with single lever control. Fast and smooth shifting of gears with Pulse Width Modulation (PWM) valve

**Transmission:** Volvo Automatic Power Shift (APS) with fully automatic shifting 1-4 and mode selector with 4 different gear shifting programs, including AUTO. OptiShift transmission is also available as an option. **Axles:** Volvo fully floating axle shafts with planetary hub reductions and cast steel axle housing. Fixed front axle and oscillating rear axle. 100% differential lock on the front axle.

differential lock off the front axies			
		L110H	L120H
Transmission	Volvo	HTE 206C	HTE 206C
Torque multiplication, stall ratio		2.47:1	2.47:1
Maximum speed, forward/reverse			
1st gear	km/h	7	7
2nd gear km/h		13.5	13.5
3rd gear	km/h	28	28
4th gear	km/h	40	40
Note: 4th gear limited by ECU			
Measured with tires		750/65R25	750/65R25
Front axle/rear axle		AWB 31/ AWB 30	AWB 31/ AWB 30
Rear axle oscillation	±°	13	13
Ground clearance	mm	460	460
at oscillation	٥	13	130

#### Electrical system

Central warning system: Contronic electrical system with central warning light and buzzer for following functions: - Serious engine fault - Low steering system pressure - Over speed warning engine - Interruption in communication (computer fault) Central warning light and buzzer with the gear engaged for the following functions. - Low engine oil pressure - High engine oil temperature - High charge air temperature - Low coolant level - High coolant temperature - High crank case pressure - Low transmission oil pressure - High transmission oil temperature - Low brake pressure - Engaged parking brake - Fault on brake charging - Low hydraulic oil level - High hydraulic oil temperature - Overspeeding in engaged gear - High brake cooling oil temperature front and rear axles.

		L110H	L120H
Voltage	V	24	24
Batteries	V	2 x 12	2 x 12
Battery capacity	Ah	2 x 170	2 x 170
Cold cranking capacity, approx	Α	1 000	1000
Alternator rating	W/A	2 280/80	2 280/80
Starter motor output	kW	5.5	5.5

#### **Brake system**

**Service brake:** Volvo dual-circuit system with nitrogen charged acculmulators. Outboard mounted hydraulically operated, fully sealed oil circulation cooled wet disc brakes. The operator can select automatic declutch of the transmission when braking by selecting the setting in the contronics.

**Parking brake:** Dry disc brake. Applied by spring force, electro-hydraulic release with a switch on the instrument panel.

Secondary brake: Dual brake circuits with rechargeable accumulators. One circuit or the parking brake fulfills all safety requirements.

Standard: The brake system complies with the requirements of ISO 3450.

		L110H	L120H
Number of brake discs per wheel front		1	1
Accumulators	1	3 x 1.0	3 x 1.0

#### Cab

Instrumentation: All important information is centrally located in the operator's field of vision. Display for Contronic monitoring system.

Heater and defroster: Heater coil with filtered fresh air and fan with auto and manual(11 speed) setting. Defroster vents for all window areas. **Operator's seat:** Operator's seat with adjustable suspension and retractable seatbelt. The seat is mounted on a bracket on the rear cab wall and floor. The forces from the retractable seatbelt are absorbed by the seat

rails.

Standard: The cab is tested and approved according to ROPS (ISO 3471, SAE J1040), FOPS (ISO 3449). The cab meets with requirements according to ISO 6055 (Operator overhead protection - Industrial trucks) and SAE J386 ("Operator Restraint System").

Refrigerant of the type R134a is used when this machine is equipped with air conditioning. Contains fluorinated greenhouse gas R134a, Global Warming Potential 1.430 t CO2-eq.

9	- 1		
		L110H	L120H
Emergency exit: Use emergen	cy hammer to	break window	•
Ventilation	m³/min	9	9
Heating capacity	kW	16	16
Air conditioning (optional)	kW	7.5	7.5

#### Lift Arm System

Torque Parallel linkage (TP-linkage) with high breakout torque and parallel movement throughout the entire lifting range

		L110H	L120H
Lift cylinders		2	2
Cylinder bore	mm	150	150
Piston rod diameter	mm	80	80
Stroke	mm	676	676
Tilt cylinder		1	1
Cylinder bore	mm	210	210
Piston rod diameter	mm	110	110
Stroke	mm	412	412

#### Hydraulic system

**System supply:** Two load-sensing axial piston pumps with variable displacement. The steering system always has priority.

Valves: Double-acting 2-spool valve. The main valve is controlled by a

2-spool pilot valve. **Lift function:** The valve has four positions; raise, hold, lower and floating position. Inductive/magnetic automatic boom kickout can be switched on and off and is adjustable to any position between maximum reach and full

Tilt function: The valve has three functions including rollback, hold and dump. Inductive/magnetic automatic tilt can be adjusted to the desired bucket angle.

Cylinders: Double-acting cylinders for all functions
Filter: Full flow filtration through 10 micron (absolute) filter cartridge.

		L110H	L120H
Working pressure maximum, pump 1 for working hydraulic system	MPa	27.0 ± 0.5	29.0 ± 0.5
Flow	l/min	128	128
at	MPa	10	10
engine speed	r/min	1900	1900
Working pressure maximum, pump 2 for steering-, brake-, pilot- and working hydraulic system		29.0 ± 0.5	31.0 ± 0.5
Flow	l/min	128	128
at	MPa	10	10
engine speed	r/min	1900	1900
Working pressure maximum, pump 3 for brake- and cooling fan system	MPa	21.0 ± 0.5	21.0 ± 0.5
Flow	l/min	33	33
at	MPa	10	10
engine speed	r/min	1900	1900
Pilot system, working pressure	MPa	3.5	3.5
Cycle times			
Lift	s	5.4	5.4
Tilt	s	2.1	2.1
Lower, empty	s	2.5	2.5
Total cycle time	s	10	10

#### Steering System

Steering system: Load-sensing hydrostatic articulated steering.

System supply: The steering system has priority feed from a load-sensing axial piston pump with variable displacement. Steering cylinders: Two double-acting cylinders

		L110H	L120H
Steering cylinders		2	2
Cylinder bore	mm	80	80
Rod diameter	mm	50	50
Stroke	mm	486	486
Working pressure	MPa	21	21
Maximum flow	l/min	120	120
Maximum articulation	±°	40	40

#### Service Refill

**Service accessibility:** Electrically openable engine hood with large opening angle giving excellent access to the engine compartment. Fluid filters and component breather air filters promote long service intervals

Possibility to monitor, log and analyze data to facilitate troubleshooting.

	L110H	L120H
Fuel tank I	270	270
DEF/AdBlue® tank	25	25
Engine coolant I	43	43
Hydraulic oil tank	133	133
Transmission oil	38	38
Engine oil I	22	22
Axle oil front	36	36
Axle oil rear	41	41

#### Sound Level

	L110H	L120H	
Sound pressure level in cab according to ISO 6396			
L <sub>pA</sub> dB	68	68	
External sound level according to ISO 639 2000/14/EC	5 and EU Noise	Directive	
L <sub>WA</sub> dB	106	106	

## **Specifications**

		L11	он	L12	20H
Tires 2	Tires 23.5 R25 L3				
		Standard boom	Long boom	Standard boom	Long boom
В	mm	6 480	7 010	6 580	7 070
С	mm	3 200	3 200	3 200	3 200
D	mm	430	430	440	440
F	mm	3 380	3 380	3 380	3 380
G	mm	2 131	2 134	2 132	2 133
J	mm	3 700	4 240	3 760	4 310
K	mm	4 030	4 550	4 100	4 630
0	0	55	54	54	55
Pmax	0	50	46	50	49
R	0	40	41	42	42
R <sub>1</sub> *	0	44	48	45	50
S	0	66	64	68	64
Т	mm	98	89	119	127
U	mm	430	610	450	640
Χ	mm	2 070	2 070	2 070	2 070
Υ	mm	2 670	2 670	2 670	2 670
Z	mm	3 310	3 820	3 340	3 720
a <sub>2</sub>	mm	5 730	5 730	5 730	5 730
a <sub>3</sub>	mm	3 060	3 060	3 060	3 060
a4	±°	40	40	40	40
			H T bucket with 2.6 m <sup>3</sup>		H T bucket with 2.6 m <sup>3</sup>

<sup>\*</sup> Carry position SAE

Where applicable, specifications and dimensions are according to ISO 7131, SAE J732, ISO 7546, SAE J742, ISO 14397, SAE J818.

#### L110H


Cales code: WLA80832
Operating weight
(incl. logging cw 685 kg): 19 916 kg
Operating load: 5 850 kg


#### L120H


Sales code: WLA80832

Operating weight (incl. logging cw 685 kg): 20 713 kg Operating load: 6 400 kg

		L110H	L120H
		Tires: 750/65 R25	Tires: 750/65 R25
Α	m²	2.4	2.4
В	mm	3 470	3 470
С	mm	1850	1850
D	mm	2 850	2 850
E	mm	1 460	1 460
F	mm	1520	1 520
G	mm	2 720	2 720
Н	mm	4 580	4 580
1	mm	6 620	6 620
J	mm	2 790	2 790
K	mm	2 990	2 990
L	mm	2 060	2 060
М	mm	8 770	8 770

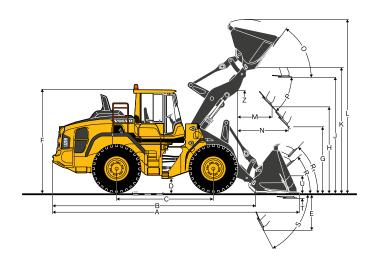

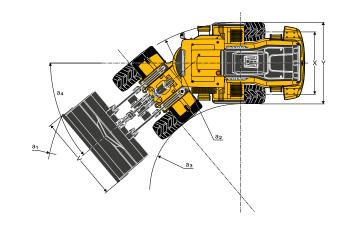

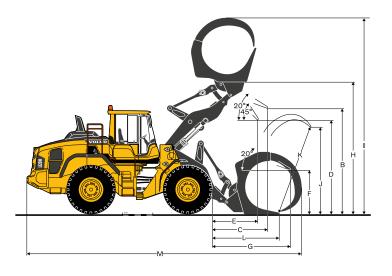

## **Specifications L110H**

L110H											
		REHAN	DLING*	GENERAL PURPOSE ROCK**			LIGHT MATERIAL		LONG BOOM***		
Tires 23.5R25 XHA2 L3											
		3.5 m <sup>3</sup> STE P BOE	3.5 m <sup>3</sup> STE H BOE	3.0 m <sup>3</sup> STE P T	3.0 m <sup>3</sup> STE H T	3.4 m <sup>3</sup> STE P BOE	3.4 m³ STE H BOE	2.7 m <sup>3</sup> SPN P T SEG	5.5 m <sup>3</sup> LM H	9.5 m <sup>3</sup> LM H	
Volume, heaped ISO/SAE	m³	3.5	3.5	3.0	3.0	3.4	3.4	2.7	5.5	9.5	
Volume at 110% fill factor	m³	3.9	3.9	3.3	3.3	3.7	3.7	3.0	6.1	10.5	
Static tipping load, straight	kg	13 460	12 780	13 770	13 100	13 350	12 680	13 780	11 980	12 070	-2 540
at 35° turn	kg	11 960	11 330	12 270	11 640	11 860	11 240	12 240	10 550	10 610	-2 330
at full turn	kg	11 520	10 900	11 820	11 210	11 420	10 810	11 780	10 130	10 180	-2 270
Breakout force	kN	162.1	149.8	175.8	161.0	157.7	145.9	143.1	115.0	100.3	
A	mm	7 970	8 080	8 120	8 220	8 010	8 120	8 310	8 500	8 800	510
E	mm	1220	1320	1350	1450	1260	1360	1 510	1700	1960	-10
Н	mm	2 820	2 750	2 720	2 660	2 790	2 720	2 610	2 420	2 220	510
L	mm	5 440	5 510	5 550	5 610	5 620	5 670	5 550	5 850	6 010	520
M	mm	1 170	1 250	1 260	1 350	1200	1280	1400	1520	1730	-30
N	mm	1 710	1 750	1 750	1800	1730	1 770	1 810	1800	1820	450
V	mm	3 000	3 000	2 880	2 880	2 880	2 880	2 880	3 000	3 400	
a <sub>1</sub> clearance circle	mm	12 750	12 800	12 710	12 770	12 660	12 710	12 830	13 060	13 610	440
Operating weight	kg	18 490	18 730	18 360	18 560	18 560	18 760	19 560	19 100	19 320	300


<sup>\*</sup> Measured with additional rehandling counterweight | \*\* With MICHELIN 23,5R25 XMINE D2 L5 Tire | \*\*\* Based on 3.0 m³ STE H T bucket

#### **Bucket Selection Chart**

The chosen bucket is determined by the density of the material and the expected bucket fill factor. The actual bucket volume is often larger than the rated capacity, due to the features of the TP linkage, including an open bucket design, good rollback angles in all positions and good bucket filling performance. The example represents a standard boom configuration. Example: Sand and gravel. Fill factor  $\sim$  105%. Density 1.6 t/m³. Result: The 3.4 m³ bucket carries 3.6 m³. For optimum stability always consult the bucket selection chart.

divays consult the bucket selection chart					
Material	Bucket fill, %		Material density, t/m³	ISO/SAE bucket volume, m³	Actual volume, m³
Earth/Clay	~ 110		1.8 1.6	3.0 3.4	3.3 3.7
Sand/ Gravel	~ 105		1.8 1.6	3.0 3.4	3.2 3.6
Aggregate	~ 100		1.8 1.6	3.5	3.5
Rock	≤100		1.7	2.7	2.7

The size of rock buckets is optimized for optimal penetration and filling capability rather than the density of the material.

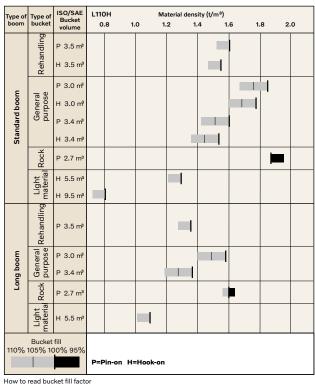

How to read bucket fill factor

Supplemental Operating Data						
		Standa	rd boom	Long boom		
Tires 23.5 R25 L3		23.5 R25 L5	750/65 R25	750/65 R25		
Width over tires	mm	30	200	200		
Ground clearance	mm	50	±0	±0		
Tipping load, full turn	kg	490	430	310		
Operating weight	kg	670	640	640		

## **Specifications L120H**

L120H											
		REHAN	DLING*		GENERAL	PURPOSE		ROCK** LIGHT MATERIAL		ATERIAL	LONG BOOM***
Tires 23.5R25 XHA2 L3											
		3.8 m <sup>3</sup> STE P BOE	3.8 m³ STE H BOE	3.3 m <sup>3</sup> STE P T	3.3 m <sup>3</sup> STE H T	3.6 m <sup>3</sup> STE P BOE	3.6 m <sup>3</sup> STE H BOE	3.0 m <sup>3</sup> SPN P T SEG	5.5 m <sup>3</sup> LM H	9.5 m <sup>3</sup> LM H	
Volume, heaped ISO/SAE	m³	3.8	3.8	3.3	3.3	3.6	3.6	3.0	5.5	9.5	
Volume at 110% fill factor	m³	4.2	4.2	3.6	3.6	4.0	4.0	3.3	6.1	10.5	
Static tipping load, straight	kg	14 360	13 680	14 800	14 450	14 810	14 080	14 860	13 010	13 120	-2 680
at 35° turn	kg	12 710	12 080	13 120	12 790	13 110	12 430	13 160	11 440	11 510	-2 440
at full turn	kg	12 220	11 610	12 630	12 300	12 610	11 950	12 660	10 980	11 040	-2 370
Breakout force	kN	163.7	151.6	189.2	173.5	172.9	159.6	150.6	121.6	106.0	
A	mm	8 140	8 240	8 230	8 340	8 050	8 160	8 390	8 610	8 910	460
E	mm	1300	1390	1380	1480	1 2 3 0	1330	1520	1730	1990	-20
Н	mm	2 840	2 780	2 780	2 700	2 900	2 830	2 690	2 480	2 270	560
L	mm	5 580	5 650	5 700	5 760	5 750	5 820	5 690	5 900	6 070	520
M	mm	1 250	1330	1 310	1390	1 190	1280	1 440	1560	1760	-50
N	mm	1 820	1 870	1840	1880	1800	1840	1930	1890	1 910	450
V	mm	3 000	3 000	3 000	3 000	3 000	3 000	2 880	3 000	3 400	
a <sub>1</sub> clearance circle	mm	12 840	12 900	12 890	12 950	12 800	12 850	12 890	13 130	13 660	410
Operating weight	kg	19 370	19 590	19 280	19 460	19 420	19 640	20 260	19 900	20 120	240


<sup>\*</sup> Measured with additional rehandling counterweight | \*\* With MICHELIN 23,5R25 XMINE D2 L5 Tire | \*\*\* Based on 3.0 m³ STE H T bucket

#### **Bucket Selection Chart**

The chosen bucket is determined by the density of the material and the expected bucket fill factor. The actual bucket volume is often larger than the rated capacity, due to the features of the TP linkage, including an open bucket design, good rollback angles in all positions and good bucket filling performance. The example represents a standard boom configuration. Example: Sand and gravel. Fill factor ~ 105%. Density 1.6 t/m³. Result: The 3.4 m³ bucket carries 3.6 m³. For optimum stability always consult the bucket selection chart.

Material	Bucket	t fill, %	Material density, t/m³	ISO/SAE bucket volume, m³	Actual volume, m³
Earth/Clay	~ 110		1.8 1.6	3.3 3.6	3.6 3.9
Sand/ Gravel	~ 105		1.8 1.6	3.3 3.6	3.5 3.8
Aggregate	~ 100		1.8 1.6	3.8	3.8
Rock	≤100		1.7	3.0	3.0

The size of rock buckets is optimized for optimal penetration and filling capability rather than the density of the material.

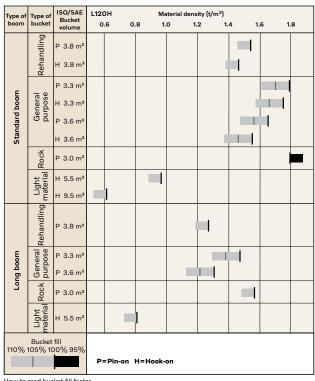

How to read bucket fill factor

Supplemental Operating Data							
		Standard boom		Long boom			
Tires 23.5 R25 L3		23.5 R25 L5	750/65 R25	750/65 R25			
Width over tires	mm	30	200	200			
Ground clearance	mm	50	±Ο	±0			
Tipping load, full turn	kg	450	380	330			
Operating weight	kg	670	640	640			

# **Equipment**

Ingline Exhaust after-treatment system  Three stage air cleaner, pre-cleaner, primary and secondary filter Indicator for coolant level Preheating of induction air Fuel pre-filter with water trap Fuel gauer water water water water water for filter filter for filter		L110H	L120H
Three stage air cleaner, pre-cleaner, primary and secondary filter Indiciator for coolant level Preheating of induction air Fuel pre-filter with water trap Fuel pre-filter with water trap Fuel filter Crankcase breather oil trap Exterior radiator air intake protection  Privetrain Automatic Power Shift Fully automatic gearshifting, 1-4 PWM-controlled gearshifting, 1-4 PWM-controlled gearshifting, 1-6 Provard and reverse switch by hydraulic lever console Indicator glass for transmission oil level Differentials: Front, 100% hydraulic diff lock. Rear, conventional. Lock-up first gear Electrical system 24 V, pre-wired for optional accessories Alternator 24V/80A/2280W Alternator 24V/80A/280W Alternator	_		
Indicator for coolant level Preheating of induction air Fuel pre-filter with water trap Fuel filter Crankcase breather oil trap Exterior radiator air intake protection Privetrain Automatic Power Shift Fully automatic gearshifting, 1-4 PWM-controlled gearshifting 1-6 Forward and reverse switch by hydraulic lever console Indicator glass for transmission oil level Differentials: Front, 100% hydraulic diff lock. Rear, conventional. Lock-up first gear Electrical system  24 V, pre-wired for optional accessories Alternator 24V/80A/22B0W Battery disconnect switch Fuel gauge Puel gauge Puel with graph 1-1 Fuel level Diesel Exhaust Fluid/AdBlue level Transmission temperature Coolant temperature Unstrument lighting Lighting: Twin halogen front headlights with high and low beams Parking lights Double brake and tail lights Turn signals with flashing hazard light function Halogen work lights (2 front and 2 rear) Dontronic monitoring system Monitoring and logging of machine data Contronic display Fuel consumption Diesel Exhaust Fluid/AdBlue consumption Ambient temperature Clock Contronic display Fuel consumption Diesel Exhaust Fluid/AdBlue consumption Ambient temperature Clock Test function for warning and indicator lights Brake test Test function for warning and indicator lights Brake test Test function for warning and indicator lights Brake test Test function for warning and indicator lights Brake test Test function for warning and indicator lights Brake test Test function for warning and indicator lights Brake test Test function for warning and indicator lights Brake test Test function for warning and indicator lights Brake pressure Transmission oil temperature Transmission oil temperature Transmission oil temperature Engine oil temperature Transmission oil temperature Transmission oil temperature Transmission oil temperature Ligh crans oil temperature Ligh cransies oil temperature Ligh charge-air			
Preheating of induction air Fuel pre-filter with water trap Fuel filter Fuel pre-filter with water trap Fuel filter Crankcase breather oil trap Exterior radiator air intake protection			
Fuel filter Cankcase breather oil trap Exterior radiator air intake protection Privetrain Automatic Power Shift Fully automatic gearshifting, 1-4 PVM-controlled gearshifting Forward and reverse switch by hydraulic lever console Indicator glass for transmission oil level Differentials: Front, 100% hydraulic diffock. Rear, conventional. Lock-up first gear Electrical system 24 V, pre-wired for optional accessories Alternator 24V/80A/2280W Battery disconnect switch Fuel gauge Alternator 24V/80A/2280W Battery disconnect switch Fuel gauge Bless and state fluid/AdBlue level Instrument cluster: Fuel level Diesel Exhaust Fluid/AdBlue level Transmission temperature Coolant temperature Instrument lighting Lighting: Twin halogen front headlights with high and low beams Parking lights Double brake and tail lights Turn signals with flashing hazard light function Halogen work lights (2 front and 2 rear) Dontronic monitoring system Monitoring and logging of machine data Contronic display Fuel consumption Diesel Exhaust Fluid/AdBlue consumption Ambient temperature Clock Test function for warning and indicator lights Brake test Test function, sound level at max fan speed Warning and display message: Regeneration Regine coolant temperature Engine oil temperature Engine oli temperature Figh charaction indication: High transmission oil temperature Eligh ergine coolant temperature Eligh ergine coolant temperature Eligh ergi		•	•
Crankcase breather oil trape Exterior radiator air intake protection  Privetrain Automatic Power Shift Fully automatic gearshifting, 1-4 PWM-controlled gearshifting, 1-4 PWM-controlled gearshifting Informatian Power switch by hydraulic lever console Indicator glass for transmission oil level Differentials: Front, 100% hydraulic diff lock. Rear, conventional. Lock-up first gear  Ilectrical system  24 V, pre-wired for optional accessories Alternator 24V/80A/2280W Battery disconnect switch Fuel gauge Power were switch Fuel gauge Power were Hour meter Electric horn Instrument cluster: Fuel level Diesel Exhaust Fluid/AdBlue level Transmission temperature Coolant temperature Instrument lighting Lighting: Twin halogen front headlights with high and low beams Parking lights Double brake and tail lights Turn signals with flashing hazard light function Halogen work lights (2 front and 2 rear)  Pontronic display Diesel Exhaust Fluid/AdBlue consumption Armbient temperature Clock Clock Test function for warning and indicator lights Frake test Desel Exhaust Fluid/AdBlue consumption Armbient temperature Charge-air temperature Engine oil temperature Fransmission oil te			
Schankase breater on trape Exterior radiator air intake protection  • Privetrain  Automatic Power Shift  Fully automatic gearshifting, 1-4  • PWM-controlled gearshifting  Forward and reverse switch by hydraulic lever console  Indicator glass for transmission oil level  Differentals: Front, 100% hydraulic diff lock. Rear, conventional.  Lock-up first gear  Electrical system  24 V, pre-wired for optional accessories  Alternator 24V/80A/2280W  Alternator 24V/80A/280W  Alternator 2			
Automatic Power Shift Fully automatic gearshifting, 1-4 PWM-controlled gearshifting Forward and reverse switch by hydraulic lever console Indicator glass for transmission oil level Differentials: Front, 100% hydraulic diff lock. Rear, conventional. Lock-up first gear Lock-up fir	•		-
Fully automatic gearshifting, 1-4 PWM-controlled gearshifting Forward and reverse switch by hydraulic lever console Indicator glass for transmission oil level Differentials: Front, 100% hydraulic diff lock. Rear, conventional. Lock-up first gear  Ielectrical system 24 V, pre-wired for optional accessories Alternator 24V/80A/2280W Battery disconnect switch Fuel gauge Hour meter Electric horn Instrument cluster: Fuel level Diesel Exhaust Fluid/AdBlue level Transmission temperature Coolant temperature Linstrument lighting Lighting: Twin halogen front headlights with high and low beams Parking lights Double brake and tail lights Turn signals with flashing hazard light function Halogen work lights (2 front and 2 rear)  Dountonic monitoring system Monitoring and logging of machine data Contronic display  Fuel consumption Diesel Exhaust Fluid/AdBlue consumption Ambient temperature Clock East function for warning and indicator lights Brake test Test function sound level at max fan speed Warning and indicator lights: Battery charging Parking brake Warning and display message: Regeneration Regeneration Regeneration Engine coolant temperature Charge-air temperature Engine oil temperature Transmission oil temperature Transmission oil temperature Brake pressure Parking brake applied Brake charging Overspeed at direction change Axle oil temperature Eragine oil pressure Transmission oil temperature Brake pressure Parking brake applied Brake charging Overspeed at direction change Axle oil temperature Engine oil temperature Engine oil temperature High engine coolant temperature High engine coolant temperature High engine coolant temperature High engine coolant temperature High engine oil pressure High charge-air temperature High charge-air temperature High engine oil temperature High engine oil temperature High engine oil temperature High charge-air temperature High engine oil pressure High crankcase pressure			
PWM-controlled gearshifting Forward and reverse switch by hydraulic lever console Indicator glass for transmission oil level Differentials: Front, 100% hydraulic diff lock. Rear, conventional. Lock-up first gear  22 V. pre-wired for optional accessories Alternator 24V/80A/2280W  Battery disconnect switch Lour meter Electric horn Instrument cluster: Fuel level Diesel Exhaust Fluid/AdBlue level Transmission temperature Coolant temperature Instrument lighting Lighting: Twin halogen front headlights with high and low beams Parking lights Double brake and tail lights Turn signals with flashing hazard light function Halogen work lights (2 front and 2 rear)  Contronic display  Fuel consumption Diesel Exhaust Fluid/AdBlue consumption Ambient temperature Clock Test function for warning and indicator lights Brake test Test function, sound level at max fan speed Warning and indicator lights: Battery charging Parking brake Warning and display message: Regeneration Engine oil pressure Transmission oil temperature Engine oil pressure Crankcase pressure Attachment lock open Safety Belt Warning Level warnings: Fuel level Diesel Exhaust Fluid/AdBlue level Engine oil level Hydraulic oil level High charge-air temperature Engine shutdown to idle in case of malfunction indication: High transmission oil temperature Eligine shutdown to idle in case of malfunction indication: High tr		•	•
Forward and reverse switch by hydraulic lever console Indicator glass for transmission oil level Differentials: Front, 100% hydraulic diff lock. Rear, conventional. Lock-up first gear Izectrical system 24 V, pre-wired for optional accessories Alternator 24V/80A/2280W		•	•
Indicator glass for transmission oil level Differentials: Front, 100% hydraulic diff lock. Rear, conventional. Lock-up first gear Lectrical system 24 V, pre-wired for optional accessories Alternator 24V/80A/2280W Battery disconnect switch Fuel gauge Hour meter Electric horn Instrument cluster: Fuel level Diesel Exhaust Fluid/AdBlue level Transmission temperature Coolant temperature Instrument lighting Lighting: Twin halogen front headlights with high and low beams Parking lights Double brake and tail lights Turn signals with flashing hazard light function Halogen work lights (2 front and 2 rear)  Contronic monitoring system Monitoring and logging of machine data Contronic display Fuel consumption Diesel Exhaust Fluid/AdBlue consumption Ambient temperature Clock Test function for warning and indicator lights Brake test Test function, sound level at max fan speed Warning and indicator lights: Battery charging Parking brake Warning and display message: Regeneration Engine oil pressure Hydraulic oil temperature Engine oil pressure Hydraulic oil temperature Engine oil pressure Hydraulic oil temperature Brake charging Diesel Exhaust Fluid/AdBlue level Engine oil pressure Hydraulic oil temperature Engine oil pressure Hydraulic oil temperature Erake pressure Parking brake applied Brake charging Dieses Exhaust Fluid/AdBlue level Engine oil temperature Eragine pressure Parking brake applied Brake charging Diese Exhaust Fluid/AdBlue level Engine oil temperature Hydraulic oil temperature High engine coolant temperature High engine oil pressure High charge-air temperature High engine oil pressure High charge-air temperature Engine solitorion oil temperature High engine oil pressure High charge-air temperature Engine solitorion oil temperature High engine oil pressure High charge-air temperature Engine solitorion oil temperature Engine solitorion oil temperature Engine so		•	•
Differentials: Front, 100% hydraulic diff lock. Rear, conventional. Lock-up first gear  24 V, pre-wired for optional accessories Alternator 24/80A/2280W  Battery disconnect switch Fuel gauge Hour meter Electric horn Instrument cluster: Fuel level Diesel Exhaust Fluid/AdBlue level Transmission temperature Coolant temperature Instrument lighting Lighting: Twin halogen front headlights with high and low beams Parking lights Double brake and tail lights Turn signals with flashing hazard light function Halogen work lights (2 front and 2 rear)  Diesel Exhaust Fluid/AdBlue consumption Ambient temperature Clock Test function for warning and indicator lights Batke test Test function, sound level at max fan speed Warning and display message: Regeneration Engine coolant temperature Charge-air temperature Engine oil temperature Engine oil temperature Engine oil temperature Erasmission oil pressure Hydraulic oil temperature Steering pressure Parking brake applied Brake charging Overspeed at direction change Axle oil temperature Eragine oil temperature Eragine oil pressure Hydraulic oil temperature Steering pressure Parking brake applied Brake charging Overspeed at direction change Axle oil temperature Eragine oil pressure Hydraulic oil temperature Steering pressure Crankcase pressure Axle oil temperature Eragine oil level Engine coolant temperature High charge-air temperature High engine coolant temperature High engine oil pressure High charge-air temperature High engine oil temperature High charge-air temperature High engine oil temperature High engine oil temperature High charge-air temperature Engine oil pressure High charge-air temperature Engine shutdown to idle in case of malfunction indication: High transmission oil temperature Engine shutdown to idle in case of malfunction indication: High transm		•	•
Section   Sect		•	•
Alternator 24V/80A/2280W  Alternator 24V/80A/2280W  Battery disconnect switch Fuel gauge Hour meter Electric horn Instrument cluster: Fuel level Diesel Exhaust Fluid/AdBlue level Transmission temperature Coolant temperature Instrument lighting Lighting: Twin halogen front headlights with high and low beams Parking lights Double brake and tail lights Turn signals with flashing hazard light function Halogen work lights (2 front and 2 rear)  Contronic monitoring system Monitoring and logging of machine data Contronic display Fuel consumption Diesel Exhaust Fluid/AdBlue consumption Ambient temperature Clock Cock Test function for warning and indicator lights Brake test Test function, sound level at max fan speed Warning and indicator lights: Battery charging Parking brake Warning and display message: Regeneration Engine colant temperature Charge-air temperature Engine oil temperature Transmission oil temperature Transmission oil temperature Brake pressure Transmission oil pressure Hydraulic oil temperature Brake pressure Transmission oil pressure Hydraulic oil temperature Brake pressure Transmission oil pressure Hydraulic oil temperature Steering pressure Attachment lock open Safety Belt Warning Level warnings: Fuel level Diesel Exhaust Fluid/AdBlue level Engine coloant tewel Transmission oil level Hydraulic oil level oil level Engine coolant temperature Low engine oil pressure High charge-air temperature Engine oil hemperature Engine oil level Engine oroue reduction in case of malfunction indication: High transmission oil temperature Engine shutdown to idle in case of malfunction indication: High transmission oil temperature Engine shutdown to idle in case of malfunction indication: High transmission	· · ·	•	•
Alternator 24V/80A/2280W  Battery disconnect switch Fuel gauge Hour meter Electric horn Instrument cluster: Fuel level Diesel Exhaust Fluid/AdBlue level Transmission temperature Coolant temperature Instrument lighting Lighting: Twin halogen front headlights with high and low beams Parking lights Double brake and tail lights Turn signals with flashing hazard light function Halogen work lights (2 front and 2 rear) Double brake and tail lights Turn signals with flashing hazard light function Halogen work lights (2 front and 2 rear) Doutronic monitoring system  Monitoring and logging of machine data Contronic display Fuel consumption Diesel Exhaust Fluid/AdBlue consumption Ambient temperature Clock Test function for warning and indicator lights Brake test  Test function, sound level at max fan speed Warning and indicator lights: Battery charging Parking brake Warning and display message: Regeneration Engine oil pressure Transmission oil temperature Engine oil pressure Transmission oil pressure Transmission oil pressure Transmission oil pressure Transmission oil temperature Brake pressure Parking brake applied Brake charging Overspeed at direction change Axle oil temperature Steering pressure Crankcase pressure Attachment lock open Safety Belt Warning Level warnings: Fuel level Diesel Exhaust Fluid/AdBlue level Engine oolant level Transmission oil level Hydraulic oil level Washer fluid level Engine oolant level Transmission oil lermperature Ligh engine coolant temperature High charge-air temperature Low engine oil pressure High charge-air temperature Engine oil prespare Engine shutdown to idle in case of malfunction indication: High transmission oil temperature Engine shutdown to idle in case of malfunction indication: High transmission oil temperature Engine shutdown to idle in case of malfunction indication: High transmission oil temperature Engine shutdown to idle in case	•		
Battery disconnect switch Fuel gauge Plour meter Electric horn Instrument cluster: Fuel level Diesel Exhaust Fluid/AdBlue level Transmission temperature Coolant temperature Lighting: Twin halogen front headlights with high and low beams Parking lights Double brake and tail lights Double brake and tail lights Turn signals with flashing hazard light function Halogen work lights (2 front and 2 rear) Pontronic monitoring system Monitoring and logging of machine data Contronic display Fuel consumption Diesel Exhaust Fluid/AdBlue consumption Ambient temperature Clock Test function for warning and indicator lights Brake test Test function, sound level at max fan speed Warning and indicator lights: Battery charging Parking brake Warning and display message: Regeneration Engine colant temperature Charge-air temperature Engine oil temperature Engine oil pressure Transmission oil temperature Brake pressure Parking brake applied Brake charging Overspeed at direction change Axle oil temperature Steering pressure Parking brake applied Brake charging Overspeed at direction change Axle oil temperature Steering pressure Crankcase pressure Attachment lock open Safety Belt Warning Level warnings: Fuel level Diesel Exhaust Fluid/AdBlue level Engine colant level Transmission oil level Hydraulic oil level Bragine colant temperature High engine colant temperature High engine colant temperature High engine colant temperature High charge-air temperature Engine oil pressure High charge-air tempe			
Fuel gauge Hour meter Electric horn Instrument cluster: Fuel level Diesel Exhaust Fluid/AdBlue level Transmission temperature Coolant temperature Instrument lighting Lighting: Twin halogen front headlights with high and low beams Parking lights Double brake and tail lights Turn signals with flashing hazard light function Halogen work lights (2 front and 2 rear)  Contronic monitoring system Monitoring and logging of machine data Contronic display Fuel consumption Diesel Exhaust Fluid/AdBlue consumption Ambient temperature Clock Test function for warning and indicator lights Brake test Test function, sound level at max fan speed Warning and indicator lights: Battery charging Parking brake Warning and display message: Regeneration Engine colant temperature Engine oil pressure Transmission oil temperature Engine oil pressure Hydraulic oil temperature Brake pressure Transmission oil pressure Vatering brake applied Brake charging Overspeed at direction change Axle oil temperature Steering pressure Crankcase pressure Attachment lock open Safety Belt Warning Level warnings: Fuel level Diesel Exhaust Fluid/AdBlue level Engine ool olant level Transmission oil level Hydraulic oil level Washer fluid level Engine coolant temperature Ligh engine coolant temperature High engine coolant temperature High engine coolant temperature High engine coolant temperature High charge-air temperature Low engine oil pressure High charge-air temperature Low engine oil prepare Fingine oil gilevel Hydraulic oil level Washer fluid level Engine oolant temperature Low engine oil pressure High charge-air temperature Low engine oil pressure High charge-air temperature Engine oil enge-air temperature Low engine oil pressure High charge-air temperature Engine oil temperature Engine oil temperature Engine oil pressure High charge-air temperature Engine oil temperature Engine oil temperature Low engine oil pressure High charge-air temperature Engine oil tempera			
Hour meter Electric horn Instrument cluster: Fuel level Diesel Exhaust Fluid/AdBlue level Transmission temperature Coolant temperature Instrument lighting Lighting: Twin halogen front headlights with high and low beams Parking lights Double brake and tail lights Turn signals with flashing hazard light function Halogen work lights (2 front and 2 rear)  Contronic monitoring system Monitoring and logging of machine data Contronic display Fuel consumption Diesel Exhaust Fluid/AdBlue consumption Ambient temperature Clock Test function for warning and indicator lights Brake test Test function for warning and indicator lights Brake test Brake generation Engine colant temperature Engine oil temperature Engine oil temperature Engine oil pressure Transmission oil temperature Brake pressure Parking brake applied Brake charging Overspeed at direction change Axle oil temperature Erafine pressure Parking brake applied Brake charging Overspeed at direction change Axle oil temperature Steering pressure Crankcase pressure Parking brake applied Brake charging Overspeed at direction change Axle oil temperature Steering pressure Crankcase pressure Attachment lock open Safety Belt Warning Level warnings: Fuel level Diesel Exhaust Fluid/AdBlue level Engine oil level Engine ooil level Engine ooil level Uransmission oil level Hydraulic oil level Washer fluid level Engine to que reduction in case of malfunction indication: High engine ool ent perperature Engine shutdown to idle in case of malfunction indication: High engine oil prepssure High charge-air temperature Engine in transmission oil temperature Engine orange-air temperature Engin	•	•	•
Instrument cluster: Fuel level Diesel Exhaust Fluid/AdBlue level Transmission temperature Coolant temperature Instrument lighting Lighting: Twin halogen front headlights with high and low beams Parking lights Double brake and tail lights Turn signals with flashing hazard light function Halogen work lights (2 front and 2 rear) Dontronic monitoring system  Monitoring and logging of machine data Contronic display Level consumption Diesel Exhaust Fluid/AdBlue consumption Ambient temperature Clock Test function for warning and indicator lights Brake test Test function, sound level at max fan speed Warning and indicator lights: Battery charging Parking brake Warning and display message: Regeneration Engine coolant temperature Charge-air temperature Engine oil temperature Engine oil temperature Engine oil temperature Engine oil temperature Brake pressure Parking brake applied Brake charging Overspeed at direction change Axle oil temperature Steering pressure Crankcase pressure Attachment lock open Safety Belt Warning Level warnings: Fuel level Diesel Exhaust Fluid/AdBlue level Engine coolant level Transmission oil level Hydraulic oil level Washer fluid level Engine coolant temperature Ligh engine colant temperature High engine colant temperature High engine colant temperature High engine colant temperature Low engine oil temperature Low engine oil temperature High engine colant temperature High engine colant temperature Engine shutdown to idle in case of malfunction indication: High engine soll temperature Engine shutdown to idle in case of malfunction indication: High engine soll temperature Engine in transmission oil temperature Engine shutdown to idle in case of malfunction indication: High crankcase pressure High charge-air temperature Engine oil transmission oil temperature Engine in transmission oil temperature Engine in transmission oil temperature Engine oil temperature		•	•
Diesel Exhaust Fluid/AdBlue level Transmission temperature Coolant temperature Instrument lighting Lighting: Twin halogen front headlights with high and low beams Parking lights Double brake and tail lights Turn signals with flashing hazard light function Halogen work lights (2 front and 2 rear)  Contronic monitoring system  Monitoring and logging of machine data Contronic display Fuel consumption Diesel Exhaust Fluid/AdBlue consumption Ambient temperature Clock Clock Test function for warning and indicator lights Brake test Test function, sound level at max fan speed Warning and indicator lights: Battery charging Parking brake Warning and display message: Regeneration Engine coolant temperature Engine oil temperature Engine oil temperature Engine oil pressure Transmission oil temperature Brake pressure Parking brake applied Brake charging Overspeed at direction change Axle oil temperature Steering pressure Attachment lock open Safety Belt Warning Level warnings: Fuel level Diesel Exhaust Fluid/AdBlue level Engine collant level Hydraulic oil level Washer fluid level Engine colant temperature Ligh engine coolant temperature High engine coolant temperature High engine coolant temperature High engine coolant temperature High engine colant temperature High engine colant temperature High charge-air temperature Low engine oil repressure High charge-air temperature Low engine oil pressure High charge-air temperature Engine shutdown to idle in case of malfunction indication: High transmission oil temperature Engine shutdown to idle in case of malfunction indication: High transmission oil temperature Engine shutdown to idle in case of malfunction indication: High transmission oil temperature Engine shutdown to idle in case of malfunction indication: High transmission oil temperature		•	•
Diesel Exhaust Fluid/AdBlue level Transmission temperature Coolant temperature Instrument lighting Lighting: Twin halogen front headlights with high and low beams Parking lights Double brake and tail lights Turn signals with flashing hazard light function Halogen work lights (2 front and 2 rear) Dontronic monitoring system  Monitoring and logging of machine data Contronic display Leul consumption Diesel Exhaust Fluid/AdBlue consumption Ambient temperature Clock Test function for warning and indicator lights Brake test Test function, sound level at max fan speed Warning and indicator lights: Battery charging Parking brake Warning and display message: Regeneration Engine coolant temperature Charge-air temperature Engine oil temperature Engine oil pressure Transmission oil pressure Hydraulic oil temperature Brake pressure Transmission oil pressure Attachment lock open Safety Belt Warning Level warnings: Fuel level Diesel Exhaust Fluid/AdBlue level Engine oil level Hydraulic oil pressure High engine coolant temperature Low engine oil temperature Lighenge oil temperature Low engine oi			
Transmission temperature Coolant temperature Instrument lighting Lighting: Twin halogen front headlights with high and low beams Parking lights Double brake and tail lights Turn signals with flashing hazard light function Halogen work lights (2 front and 2 rear)  Contronic monitoring system  Monitoring and logging of machine data Contronic display Fuel consumption Diesel Exhaust Fluid/AdBlue consumption Ambient temperature Clock Cok Test function for warning and indicator lights Brake test Test function, sound level at max fan speed Warning and indicator lights: Battery charging Parking brake Warning and display message: Regeneration Engine coloant temperature Engine oil temperature Engine oil pressure Transmission oil pressure Hydraulic oil temperature Steering pressure Attachment lock open Safety Belt Warning Level warnings: Fuel level Diesel Exhaust Fluid/AdBlue level Engine coloant level Transmission oil level Hydraulic oil ressure High engine colant temperature Low engine oil pressure High charkease pressure High charkease pressure High charge-air temperature Low engine oil pressure High charge-air temperature Engine soutdown to idle in case of malfunction indication: High transmission oil temperature Engine shutdown to idle in case of malfunction indication: High transmission oil temperature Engine in transmission oil temperature Engine shutdown to idle in case of malfunction indication: High transmission oil temperature Engine in transmission oil temperature Engine transmission oil temperature Engine oil temperature			
Lighting: Twin halogen front headlights with high and low beams Parking lights Double brake and tail lights Turn signals with flashing hazard light function Halogen work lights (2 front and 2 rear)  Contronic monitoring system Monitoring and logging of machine data Contronic display Fuel consumption Diesel Exhaust Fluid/AdBlue consumption Ambient temperature Clock Clock Test function for warning and indicator lights Brake test Test function, sound level at max fan speed Warning and indicator lights: Battery charging Parking brake Warning and display message: Regeneration Engine coolant temperature Charge-air temperature Engine oil temperature Engine oil temperature Erngine oil temperature Brake pressure Transmission oil temperature Transmission oil pressure Parking brake applied Brake charging Overspeed at direction change Axle oil temperature Steering pressure Crankcase pressure Attachment lock open Safety Belt Warning Level warnings: Fuel level Diesel Exhaust Fluid/AdBlue level Engine coloant level Engine coloant level Transmission oil level Hydraulic oil level Washer fluid level Engine torque reduction in case of malfunction indication: High engine coloant temperature Low engine oil pressure High capine oil temperature Low engine oil pressure High capine oil temperature Low engine oil pressure High capine oil temperature Engine shutdown to idle in case of malfunction indication: High transmission oil temperature Engine shutdown to idle in case of malfunction indication: High transmission oil temperature Engine shutdown to idle in case of malfunction indication: High transmission oil temperature Engine shutdown to idle in case of malfunction indication: High transmission oil temperature Engine shutdown to idle in case of malfunction indication: High transmission oil temperature Engine shutdown to idle in case of malfunction indication: High transmission oil temperature	Transmission temperature	•	•
Lighting: Twin halogen front headlights with high and low beams Parking lights Double brake and tail lights Turn signals with flashing hazard light function Halogen work lights (2 front and 2 rear)  Contronic monitoring system  Monitoring and logging of machine data Contronic display Fuel consumption Diesel Exhaust Fluid/AdBlue consumption Ambient temperature Clock Test function for warning and indicator lights Brake test Test function, sound level at max fan speed Warning and indicator lights: Battery charging Parking brake Warning and display message: Regeneration Engine coolant temperature Charge-air temperature Engine oil temperature Engine oil temperature Engine oil pressure Hydraulic oil temperature Brake charging Overspeed at direction change Axle oil temperature Steering pressure Crankcase pressure Attachment lock open Safety Belt Warning Level warnings: Fuel level Diesel Exhaust Fluid/AdBlue level Engine oil level Hydraulic oil pressure High engine coolant temperature Low engine oil pressure High charge-air temperature High engine colant temperature High engine colant temperature High engine oil temperature High engine oil temperature High charge-air temperature High charge-air temperature High charge-air temperature Engine shutdown to idle in case of malfunction indication: High transmission oil temperature Engine shutdown to idle in case of malfunction indication: High transmission oil temperature Engine shutdown to idle in case of malfunction indication: High transmission oil temperature			
Twin halogen front headlights with high and low beams Parking lights Double brake and tail lights Turn signals with flashing hazard light function Halogen work lights (2 front and 2 rear)  Contronic monitoring system  Monitoring and logging of machine data Contronic display Fuel consumption Diesel Exhaust Fluid/AdBlue consumption Ambient temperature Clock Test function for warning and indicator lights Brake test Test function, sound level at max fan speed Warning and indicator lights: Battery charging Parking brake Warning and display message: Regeneration Engine coolant temperature Engine oil temperature Engine oil temperature Engine oil temperature Transmission oil temperature Brake pressure Parking brake applied Brake charging Overspeed at direction change Axle oil temperature Steering pressure Crankcase pressure Attachment lock open Safety Belt Warning Level warnings: Fuel level Diesel Exhaust Fluid/AdBlue level Engine colant level Transmission oil level Hydraulic oil level Washer fluid level Engine coolant level Transmission oil level Hydraulic oil temperature Low engine oil pressure High engine coolant temperature Low engine oil pressure High crankcase pressure High charge-air temperature Engine shutdown to idle in case of malfunction indication: High transmission oil temperature Slip in transmission clutches			
Double brake and tail lights Turn signals with flashing hazard light function Halogen work lights (2 front and 2 rear)  Contronic monitoring system  Monitoring and logging of machine data Contronic display Fuel consumption Diesel Exhaust Fluid/AdBlue consumption Ambient temperature Clock Test function for warning and indicator lights Brake test Test function, sound level at max fan speed Warning and indicator lights: Battery charging Parking brake Warning and display message: Regeneration Engine coolant temperature Charge-air temperature Engine oil temperature Engine oil temperature Brake pressure Transmission oil ressure Hydraulic oil temperature Brake pressure Axle oil temperature Brake pressure Axle oil temperature Steering pressure Crankcase pressure Attachment lock open Safety Belt Warning Level Diesel Exhaust Fluid/AdBlue level Engine coolant level Transmission oil level Hydraulic oil level Hydraulic oil level Hydraulic oil level Fingine coolant level Transmission oil level Hydraulic oil level			
Turn signals with flashing hazard light function Halogen work lights (2 front and 2 rear)  Contronic monitoring system  Monitoring and logging of machine data  Contronic display  Fuel consumption  Diesel Exhaust Fluid/AdBlue consumption  Ambient temperature  Clock  Test function for warning and indicator lights  Brake test  Test function, sound level at max fan speed  Warning and indicator lights:  Battery charging  Parking brake  Warning and display message:  Regeneration  Engine coolant temperature  Charge-air temperature  Engine oil temperature  Engine oil temperature  Brake pressure  Hydraulic oil temperature  Brake pressure  Axle oil temperature  Steering pressure  Attachment lock open  Safety Belt Warning  Level warnings:  Fuel level  Diesel Exhaust Fluid/AdBlue level  Engine coolant level  Transmission oil level  Hydraulic oil level  Washer fluid level  Engine coolant level  Transmission oil level  Hydraulic oil temperature  High engine oil temperature  High engine oil temperature  High engine oil temperature  High engine oil temperature  High charge-air temperature  Engine shutdown to idle in case of malfunction indication:  High charge-air temperature  Engine shutdown to idle in case of malfunction indication:  High charge-air temperature  Engine shutdown to idle in case of malfunction indication:  High charge-air temperature  Engine shutdown to idle in case of malfunction indication:  High charge-air temperature  Engine shutdown to idle in case of malfunction indication:  High transmission oil temperature  Slip in transmission oil temperature		•	
Halogen work lights (2 front and 2 rear)  Contronic monitoring system  Monitoring and logging of machine data  Contronic display  Fuel consumption  Diesel Exhaust Fluid/AdBlue consumption  Ambient temperature  Clock  Test function for warning and indicator lights  Brake test  Fast function, sound level at max fan speed  Warning and indicator lights:  Battery charging  Parking brake  Warning and display message:  Regeneration  Engine coolant temperature  Charge-air temperature  Engine oil temperature  Engine oil pressure  Transmission oil temperature  Transmission oil pressure  Hydraulic oil temperature  Steering pressure  Crankcase pressure  Attachment lock open  Safety Belt Warning  Level warnings:  Fuel level  Diesel Exhaust Fluid/AdBlue level  Engine coolant level  Transmission oil level  Hydraulic oil level  Washer fluid level  Washer fluid level  Hydraulic oil elvel  Hydraulic oil temperature  Engine torque reduction in case of malfunction indication:  High engine coolant temperature  High engine oil temperature  High engine oil temperature  High engine oil temperature  High engine oil temperature  High charge-air temperature  Engine shutdown to idle in case of malfunction indication:  High charge-air temperature  Engine shutdown to idle in case of malfunction indication:  High charge-air temperature  Engine shutdown to idle in case of malfunction indication:  High charge-air temperature  Engine shutdown to idle in case of malfunction indication:  High charge-air temperature  Engine shutdown to idle in case of malfunction indication:  High charge-air temperature  Engine shutdown to idle in case of malfunction indication:  High engine oil temperature  Engine shutdown to idle in case of malfunction indication:  High engine oil pressure  High charge-air temperature  Engine shutdown to idle in case of malfunction indication:			
Monitoring and logging of machine data Contronic display Fuel consumption Diesel Exhaust Fluid/AdBlue consumption Ambient temperature Clock Test function for warning and indicator lights Brake test Test function, sound level at max fan speed Warning and indicator lights: Battery charging Parking brake Warning and display message: Regeneration Engine coolant temperature Engine oil temperature Engine oil temperature Engine oil pressure Transmission oil pressure Hydraulic oil temperature Brake pressure Parking brake applied Brake charging Overspeed at direction change Axle oil temperature Steering pressure Crankcase pressure Attachment lock open Safety Belt Warning Level warnings: Fuel level Diesel Exhaust Fluid/AdBlue level Engine collant level Transmission oil level Hydraulic oil level Washer fluid level Usaher fluid level Usaher fluid level Hydraulic oil temperature High engine colant temperature High engine colant temperature High engine oil temperature High charge-air temperature High charge-air temperature Engine shutdown to idle in case of malfunction indication: High charge-air temperature Engine shutdown to idle in case of malfunction indication: High charge-air temperature Engine shutdown to idle in case of malfunction indication: High charge-air temperature Slip in transmission clutches			
Contronic display Fuel consumption Diesel Exhaust Fluid/AdBlue consumption Ambient temperature Clock Test function for warning and indicator lights Brake test Test function, sound level at max fan speed Warning and indicator lights: Battery charging Parking brake Warning and display message: Regeneration Engine coolant temperature Charge-air temperature Engine oil temperature Transmission oil temperature Transmission oil pressure Hydraulic oil temperature Brake pressure Parking brake applied Brake charging Overspeed at direction change Axle oil temperature Steering pressure Crankcase pressure Attachment lock open Safety Belt Warning Level warnings: Fuel level Diesel Exhaust Fluid/AdBlue level Engine coolant level Transmission oil level Hydraulic oil level Washer fluid level Engine torque reduction in case of malfunction indication: High engine col pressure High crankcase pressure			
Diesel Exhaust Fluid/AdBlue consumption Ambient temperature Clock Test function for warning and indicator lights Brake test Test function, sound level at max fan speed Warning and indicator lights: Battery charging Parking brake Warning and display message: Regeneration Engine coolant temperature Charge-air temperature Engine oil temperature Transmission oil temperature Transmission oil pressure Hydraulic oil temperature Brake pressure Parking brake applied Brake charging Overspeed at direction change Axle oil temperature Steering pressure Crankcase pressure Attachment lock open Safety Belt Warning Level warnings: Fuel level Diesel Exhaust Fluid/AdBlue level Engine collant level Hydraulic oil level Washer fluid level Engine torque reduction in case of malfunction indication: High engine oil pressure High crankcase pressure		•	•
Diesel Exhaust Fluid/AdBlue consumption Ambient temperature Clock	· /	•	•
Ambient temperature Clock Test function for warning and indicator lights Brake test Test function, sound level at max fan speed Warning and indicator lights: Battery charging Parking brake Warning and display message: Regeneration Engine coolant temperature Charge-air temperature Engine oil temperature Engine oil pressure Transmission oil temperature Transmission oil temperature Brake pressure Parking brake applied Brake charging Overspeed at direction change Axle oil temperature Steering pressure Crankcase pressure Attachment lock open Safety Belt Warning Level warnings: Fuel level Diesel Exhaust Fluid/AdBlue level Engine coolant level Transmission oil level Hydraulic oil level Washer fluid level Engine torque reduction in case of malfunction indication: High engine coolant temperature High crankcase pressure High charge-air temperature Engine shutdown to idle in case of malfunction indication: High transmission oil temperature Slip in transmission clutches	·	•	
Test function for warning and indicator lights Brake test  Test function, sound level at max fan speed  Warning and indicator lights: Battery charging Parking brake  Warning and display message: Regeneration Engine coolant temperature Charge-air temperature Engine oil temperature Engine oil pressure Transmission oil temperature Brake pressure Parking brake applied Brake charging Overspeed at direction change Axle oil temperature Steering pressure Crankcase pressure Attachment lock open Safety Belt Warning Level warnings: Fuel level Diesel Exhaust Fluid/AdBlue level Engine oil level Engine coolant level Transmission oil level Hydraulic oil level Washer fluid level Engine torque reduction in case of malfunction indication: High engine coll pressure High crankcase pressure High transmission oil temperature Slip in transmission clutches		•	•
Brake test Test function, sound level at max fan speed Warning and indicator lights: Battery charging Parking brake Warning and display message: Regeneration Engine coolant temperature Charge-air temperature Engine oil temperature Engine oil temperature Transmission oil temperature Transmission oil temperature Brake pressure Hydraulic oil temperature Brake charging Overspeed at direction change Axle oil temperature Steering pressure Attachment lock open Safety Belt Warning Level warnings: Fuel level Diesel Exhaust Fluid/AdBlue level Engine oil level Engine coolant level Transmission oil level Hydraulic oil level Washer fluid level Engine torque reduction in case of malfunction indication: High engine col pressure High crankcase pressure High transmission oil temperature Slip in transmission clutches		•	•
Test function, sound level at max fan speed  Warning and indicator lights: Battery charging Parking brake  Warning and display message: Regeneration Engine coolant temperature Charge-air temperature Engine oil temperature Engine oil pressure Transmission oil temperature Transmission oil temperature Brake pressure Parking brake applied Brake charging Overspeed at direction change Axle oil temperature Steering pressure Crankcase pressure Attachment lock open Safety Belt Warning Level warnings: Fuel level Diesel Exhaust Fluid/AdBlue level Engine oil level Engine coolant level Transmission oil level Hydraulic oil level Washer fluid level Engine torque reduction in case of malfunction indication: High engine oil temperature High engine oil temperature High crankcase pressure High crankcase pressure High charge-air temperature Slip in transmission oil teches		•	-
Warning and indicator lights: Battery charging Parking brake  Warning and display message: Regeneration Engine coolant temperature Charge-air temperature Engine oil temperature Engine oil pressure Transmission oil temperature Transmission oil temperature Brake pressure Parking brake applied Brake charging Overspeed at direction change Axle oil temperature Steering pressure Crankcase pressure Attachment lock open Safety Belt Warning Level warnings: Fuel level Diesel Exhaust Fluid/AdBlue level Engine coolant level Transmission oil level Hydraulic oil level Washer fluid level Engine torque reduction in case of malfunction indication: High engine coolant temperature High engine oil temperature High crankcase pressure High transmission oil temperature Slip in transmission clutches		•	•
Battery charging Parking brake  Warning and display message: Regeneration Engine coolant temperature Engine oil temperature Engine oil temperature Engine oil pressure Transmission oil temperature Transmission oil temperature Brake pressure Parking brake applied Brake charging Overspeed at direction change Axle oil temperature Steering pressure Crankcase pressure Attachment lock open Safety Belt Warning Level warnings: Fuel level Diesel Exhaust Fluid/AdBlue level Engine coolant level Transmission oil level Hydraulic oil level Washer fluid level Engine torque reduction in case of malfunction indication: High engine oil temperature High crankcase pressure High crankcase pressure High crankcase pressure High crankcase pressure High charge-air temperature Slip in transmission clutches			
Warning and display message: Regeneration Engine coolant temperature Charge-air temperature Engine oil temperature Engine oil temperature Transmission oil temperature Transmission oil temperature Brake pressure Parking brake applied Brake charging Overspeed at direction change Axle oil temperature Steering pressure Crankcase pressure Attachment lock open Safety Belt Warning Level warnings: Fuel level Diesel Exhaust Fluid/AdBlue level Engine oil level Engine coolant level Transmission oil level Hydraulic oil level Washer fluid level Engine torque reduction in case of malfunction indication: High engine oil temperature High crankcase pressure High crankcase pressure High charge-air temperature Slip in transmission olutches		•	•
Regeneration Engine coolant temperature Charge-air temperature Engine oil temperature Engine oil pressure Transmission oil temperature Transmission oil pressure Hydraulic oil temperature Brake pressure Parking brake applied Brake charging Overspeed at direction change Axle oil temperature Steering pressure Crankcase pressure Crankcase pressure Attachment lock open Safety Belt Warning Level warnings: Fuel level Diesel Exhaust Fluid/AdBlue level Engine oil level Engine coolant level Transmission oil level Hydraulic oil level Washer fluid level Engine torque reduction in case of malfunction indication: High engine coolant temperature High engine oil temperature High crankcase pressure High crankcase pressure High charge-air temperature Engine shutdown to idle in case of malfunction indication: High transmission oil temperature Slip in transmission clutches	· · ·		
Engine coolant temperature Charge-air temperature Engine oil temperature Engine oil temperature Engine oil pressure Transmission oil temperature Transmission oil pressure Hydraulic oil temperature Brake pressure Parking brake applied Brake charging Overspeed at direction change Axle oil temperature Steering pressure Crankcase pressure Attachment lock open Safety Belt Warning Level warnings: Fuel level Diesel Exhaust Fluid/AdBlue level Engine oil level Engine coolant level Transmission oil level Hydraulic oil level Washer fluid level Engine torque reduction in case of malfunction indication: High engine oil temperature High crankcase pressure High crankcase pressure High charge-air temperature Engine shutdown to idle in case of malfunction indication: High transmission oil temperature Slip in transmission clutches			
Engine oil temperature Engine oil pressure Transmission oil temperature Transmission oil pressure Hydraulic oil temperature Brake pressure Parking brake applied Brake charging Overspeed at direction change Axle oil temperature Steering pressure Crankcase pressure Attachment lock open Safety Belt Warning Level warnings: Fuel level Diesel Exhaust Fluid/AdBlue level Engine coolant level Transmission oil level Hydraulic oil level Washer fluid level Engine torque reduction in case of malfunction indication: High engine coolant temperature High crankcase pressure High crankcase pressure High crankcase pressure High crankcase of malfunction indication: High engine oil temperature Engine shutdown to idle in case of malfunction indication: High transmission oil temperature Slip in transmission clutches			
Engine oil pressure Transmission oil temperature Transmission oil pressure Hydraulic oil temperature Brake pressure Parking brake applied Brake charging Overspeed at direction change Axle oil temperature Steering pressure Crankcase pressure Attachment lock open Safety Belt Warning Level warnings: Fuel level Diesel Exhaust Fluid/AdBlue level Engine oil level Hydraulic oil level Hydraulic oil level Washer fluid level Engine torque reduction in case of malfunction indication: High engine coolant temperature High crankcase pressure High crankcase pressure High charge-air temperature Engine shutdown to idle in case of malfunction indication: High transmission oil temperature Slip in transmission clutches			
Transmission oil temperature Transmission oil pressure Hydraulic oil temperature Brake pressure Parking brake applied Brake charging Overspeed at direction change Axle oil temperature Steering pressure Crankcase pressure Attachment lock open Safety Belt Warning Level warnings: Fuel level Diesel Exhaust Fluid/AdBlue level Engine oil level Engine coolant level Transmission oil level Hydraulic oil level Washer fluid level Engine torque reduction in case of malfunction indication: High engine oil temperature High crankcase pressure High crankcase pressure High charge-air temperature Engine shutdown to idle in case of malfunction indication: High transmission oil temperature Slip in transmission clutches			
Hydraulic oil temperature Brake pressure Parking brake applied Brake charging Overspeed at direction change Axle oil temperature Steering pressure Crankcase pressure Attachment lock open Safety Belt Warning Level warnings: Fuel level Diesel Exhaust Fluid/AdBlue level Engine oil level Engine coolant level Transmission oil level Hydraulic oil level Washer fluid level Engine torque reduction in case of malfunction indication: High engine coolant temperature High engine il temperature Low engine oil pressure High crankcase pressure High charge-air temperature Engine shutdown to idle in case of malfunction indication: High transmission oil temperature Slip in transmission clutches			
Brake pressure Parking brake applied Brake charging Overspeed at direction change Axle oil temperature Steering pressure Crankcase pressure Attachment lock open Safety Belt Warning Level warnings: Fuel level Diesel Exhaust Fluid/AdBlue level Engine oil level Engine coolant level Transmission oil level Hydraulic oil level Washer fluid level Engine torque reduction in case of malfunction indication: High engine oil temperature High engine oil temperature High crankcase pressure High charge-air temperature Engine shutdown to idle in case of malfunction indication: High transmission oil temperature Slip in transmission clutches			
Parking brake applied Brake charging Overspeed at direction change Axle oil temperature Steering pressure Crankcase pressure Attachment lock open Safety Belt Warning Level warnings: Fuel level Diesel Exhaust Fluid/AdBlue level Engine oil level Engine coolant level Transmission oil level Hydraulic oil level Washer fluid level Engine torque reduction in case of malfunction indication: High engine ool pressure High crankcase pressure High charge-air temperature Engine shutdown to idle in case of malfunction indication: High transmission oil temperature Slip in transmission clutches		•	•
Overspeed at direction change Axle oil temperature Steering pressure Crankcase pressure Attachment lock open Safety Belt Warning Level warnings: Fuel level Diesel Exhaust Fluid/AdBlue level Engine oil level Engine coolant level Transmission oil level Hydraulic oil level Washer fluid level Engine torque reduction in case of malfunction indication: High engine coolant temperature High engine oil temperature High crankcase pressure High charge-air temperature Engine shutdown to idle in case of malfunction indication: High transmission oil temperature Slip in transmission clutches			
Axle oil temperature Steering pressure Crankcase pressure Attachment lock open Safety Belt Warning Level warnings: Fuel level Diesel Exhaust Fluid/AdBlue level Engine oil level Engine coolant level Transmission oil level Hydraulic oil level Washer fluid level Engine torque reduction in case of malfunction indication: High engine oil temperature High engine oil temperature High crankcase pressure High crankcase pressure High charge-air temperature Engine shutdown to idle in case of malfunction indication: High transmission oil temperature Slip in transmission clutches			
Steering pressure Crankcase pressure Attachment lock open Safety Belt Warning Level warnings: Fuel level Diesel Exhaust Fluid/AdBlue level Engine oil level Engine coolant level Transmission oil level Hydraulic oil level Washer fluid level Engine torque reduction in case of malfunction indication: High engine coolant temperature High engine oil temperature High crankcase pressure High crankcase pressure High charge-air temperature Engine shutdown to idle in case of malfunction indication: High transmission oil temperature Slip in transmission clutches			
Attachment lock open Safety Belt Warning Level warnings: Fuel level Diesel Exhaust Fluid/AdBlue level Engine oil level Engine coolant level Transmission oil level Hydraulic oil level Washer fluid level Engine torque reduction in case of malfunction indication: High engine coolant temperature High engine oil temperature Low engine oil pressure High crankcase pressure High charge-air temperature Engine shutdown to idle in case of malfunction indication: High transmission oil temperature Slip in transmission clutches			
Safety Belt Warning Level warnings: Fuel level Diesel Exhaust Fluid/AdBlue level Engine oil level Engine coolant level Transmission oil level Hydraulic oil level Washer fluid level Engine torque reduction in case of malfunction indication: High engine coolant temperature High engine oil temperature Low engine oil pressure High crankcase pressure High charge-air temperature Engine shutdown to idle in case of malfunction indication: High transmission oil temperature Slip in transmission clutches			
Level warnings: Fuel level Diesel Exhaust Fluid/AdBlue level Engine oil level Engine coolant level Transmission oil level Hydraulic oil level Washer fluid level Engine torque reduction in case of malfunction indication: High engine coolant temperature High engine oil temperature Low engine oil pressure High crankcase pressure High charge-air temperature Engine shutdown to idle in case of malfunction indication: High transmission oil temperature Slip in transmission clutches			
Fuel level Diesel Exhaust Fluid/AdBlue level Engine oil level Engine coolant level Transmission oil level Hydraulic oil level Washer fluid level Engine torque reduction in case of malfunction indication: High engine coolant temperature High engine oil temperature Low engine oil pressure High crankcase pressure High charge-air temperature Engine shutdown to idle in case of malfunction indication: High transmission oil temperature	,		
Engine oil level Engine coolant level Transmission oil level Hydraulic oil level Washer fluid level Engine torque reduction in case of malfunction indication: High engine coolant temperature High engine oil temperature Low engine oil pressure High crankcase pressure High charge-air temperature Engine shutdown to idle in case of malfunction indication: High transmission oil temperature Slip in transmission clutches			
Engine coolant level Transmission oil level Hydraulic oil level Washer fluid level Engine torque reduction in case of malfunction indication: High engine coolant temperature High engine oil temperature Low engine oil pressure High crankcase pressure High charge-air temperature Engine shutdown to idle in case of malfunction indication: High transmission oil temperature Slip in transmission clutches			
Hydraulic oil level Washer fluid level Engine torque reduction in case of malfunction indication: High engine coolant temperature High engine oil temperature Low engine oil pressure High crankcase pressure High charge-air temperature Engine shutdown to idle in case of malfunction indication: High transmission oil temperature Slip in transmission clutches		•	•
Washer fluid level Engine torque reduction in case of malfunction indication: High engine coolant temperature High engine oil temperature Low engine oil pressure High crankcase pressure High charge-air temperature Engine shutdown to idle in case of malfunction indication: High transmission oil temperature Slip in transmission clutches	Transmission oil level		
Engine torque reduction in case of malfunction indication: High engine coolant temperature High engine oil temperature Low engine oil pressure High crankcase pressure High charge-air temperature Engine shutdown to idle in case of malfunction indication: High transmission oil temperature Slip in transmission clutches	mygraulic oli level		
High engine coolant temperature High engine oil temperature Low engine oil pressure High crankcase pressure High charge-air temperature Engine shutdown to idle in case of malfunction indication: High transmission oil temperature Slip in transmission clutches			
Low engine oil pressure High crankcase pressure High charge-air temperature Engine shutdown to idle in case of malfunction indication: High transmission oil temperature Slip in transmission clutches	Washer fluid level		
High crankcase pressure High charge-air temperature Engine shutdown to idle in case of malfunction indication: High transmission oil temperature Slip in transmission clutches	Washer fluid level Engine torque reduction in case of malfunction indication: High engine coolant temperature		
High charge-air temperature  Engine shutdown to idle in case of malfunction indication: High transmission oil temperature Slip in transmission clutches	Washer fluid level Engine torque reduction in case of malfunction indication: High engine coolant temperature High engine oil temperature	•	
High transmission oil temperature Slip in transmission clutches	Washer fluid level Engine torque reduction in case of malfunction indication: High engine coolant temperature High engine oil temperature Low engine oil pressure	•	
Slip in transmission clutches	Washer fluid level Engine torque reduction in case of malfunction indication: High engine coolant temperature High engine oil temperature Low engine oil pressure High crankcase pressure High charge-air temperature	•	
	Washer fluid level Engine torque reduction in case of malfunction indication: High engine coolant temperature High engine oil temperature Low engine oil pressure High crankcase pressure High charge-air temperature Engine shutdown to idle in case of malfunction indication:	•	
Keypad, background lit • •	Washer fluid level Engine torque reduction in case of malfunction indication: High engine coolant temperature High engine oil temperature Low engine oil pressure High crankcase pressure High charge-air temperature Engine shutdown to idle in case of malfunction indication: High transmission oil temperature	•	•

	L110H	L120H
Hydraulic system		
Main valve, double acting 2-spool with hydraulic pilots	•	•
Variable displacement axial piston pumps (3) for:		
1 Working hydraulics, Pilot hydraulics and Brake system		
2 Working hydraulics, Pilot hydraulics, Steering and	•	•
Brake system		
3 Cooling fan and Brake system		
Electro-hydraulic servo controls	•	•
Electronic hydraulic lever lock	•	•
Automatic boom kick-out	•	•
Automatic bucket positioner	•	•
Double-acting hydraulic cylinders Indicator glass for hydraulic oil level		
Hydraulic oil cooler	•	•
Brake system		
Dual brake circuits	•	•
Dual brake pedals		
Secondary brake system	•	•
Parking brake, electro-hydraulic	•	•
Brake wear indicators	•	•
ab		
ROPS (ISO 3471), FOPS (ISO 3449)	•	•
Single key kit door/start	•	•
Acoustic inner lining	•	•
Cigarette lighter, 24 V power outlet	•	•
Lockable door Cab heating with fresh air inlet and defroster		
Fresh air inlet with two filters		•
Automatic heat control		•
loor mat	•	•
Dual interior lights		•
nterior rear-view mirrors	•	•
Oual exterior rear-view mirrors	•	•
liding window, right side	•	•
inted windshield glass	•	•
Retractable seatbelt (SAE J386)	•	•
Adjustable steering wheel	•	•
Storage compartment	•	•
Document pocket	•	•
Sun visor	•	•
Beverage holder  Windshield washer front and rear		•
Windshield washer front and rear		
nterval function for front and rear wipers	•	•
ervice and maintenance	•	
Engine oil remote drain and fill	•	•
ransmission oil remote drain and fill	•	•
ubrication manifolds, ground accessible	•	•
Pressure check connections: transmission and hydraulic,		
quick-connects		-
Tool box, lockable	•	•
xternal equipment		
Orange hand rails	•	•
Fenders, front and rear	•	•
/iscous cab mounts		
Rubber engine and transmission mounts Frame, joint lock		•
Vandalism lock prepared for		
Engine compartment		•
Radiator grille"		
Lifting eyes	•	•
Tie-down eyes	•	•
Fabricated counterweight	•	•
i donedted eedinter weight		

# **Equipment**

	L110H	L120F
Engine		
Air pre-cleaner, cyclone type	•	•
Air pre-cleaner, oil-bath type	•	•
Air pre-cleaner, turbo type	•	•
Engine auto shutdown	•	•
Engine delayed shutdown	•	•
Engine block heater	•	•
Fuel fill strainer	•	•
Fuel heater	•	•
Hand throttle control	•	•
Max. fan speed, hot climate	•	•
Radiator, corrosion-protected	•	•
Reversible cooling fan	•	•
Reversible cooling fan and axle oil cooler	•	•
ires -	-	
23.5 R25	•	•
750/65 R25	•	•
Electrical system		
Anti-theft device	•	•
Alarm kit, anti-theft function in WECU	•	•
Battery disconnect switch, additional in cab	•	•
Emergency stop	•	•
Locking device, Tag out Lock out	•	•
Headlights, assym. left	•	•
License plate holder, lighting	•	•
Rear view camera, monitor	•	•
Rear view mirrors, el.adjusted and heated	•	•
Rear view mirrors, long arm right	•	•
Rear view mirrors, el.adjusted and heated, long arm right	•	•
Reduced function working lights, reverse gear activated	•	•
Reverse alarm, audible	•	•
Reverse alarm, white noise	•	•
Reverse warning light, strobe lighting	•	•
Shortened headlight support brackets	•	•
Side marker lamps	•	•
Warning beacon LED	•	•
Warning beacon LED automatic	•	•
LED Head Light	•	•
LED tail light	•	•
LED working lights, attachments	•	•
LED working lights on cab, front and rear	•	•
LED working lights on cab, front, 2 alt. 4 LED lamps		
LED working lights on cab, rear, 2 alt. 4 LED lamps	•	•
LED working lights, rear in grille, 2 LED lamps	•	
LED working lights, front above head lamps, 2 LED		
lamps	•	•
LED work lights, side on cab, 4 LED lamps	•	•
LED light packages	•	•
Working lights halogen, attachments	•	•
Working lights on cab halogen, front and rear	•	•
Working lights on cab halogen, rear	•	•
Electrical distribution unit 24 volt	•	•
Alternator 120 amp, heavy-duty		
Load Assist	•	•
Radar detect system		
		_
	•	
Forward camera, colour Parking brake alarm, audible for air susp seats	•	•

OPTIONAL EQUIPMENT		
	L110H	L120H
Hydraulic system		,
Boom suspension system	•	•
Separate attachment locking	•	•
Arctic kit, attachment locking hoses	•	•
Boom cylinder hose and tube guards	•	•
Hydraulic fluid, biodegradable, Volvo	•	•
Hydraulic fluid, fire-resistant	•	•
Hydraulic fluid, for hot climate	•	•
Hydraulic 3rd function	•	•
hydraulic 3rd-4th function	•	•
Hydraulic constant flow control with detent for 3rd function	•	•
Single lever control, hydraulics 2 functions	•	•
Single lever control, hydraulics 3 functions	•	•
Single lever control, hydraulics 4 functions	•	•
Brake system		
Oil cooler and filter front & rear axle	•	•
Stainless steel, brake lines	•	•
Cab		
Anchorage for Operator's manual	•	•
Automatic Climate Control, ACC	•	•
ACC control panel, with Fahrenheit scale	•	•
Asbestos dust protection filter	•	•
Ashtray	•	•
Cab air pre-cleaner, cyclone type	•	•
Carbon filter	•	•
Cover plate, under cab	•	•
Lunch box holder	•	•
Volvo Armrest, operator's seat, left	•	•
Operator's seat, Volvo air susp, heavy-duty, high back, heated	•	•
Operator's seat, (air seat std) 2-point seat belt	•	•
Operator's seat, (air seat std) 3-point seat belt	•	•
Radio installation kit incl. 12 volt outlet, left side	•	•
Radio installation kit incl. 12 volt outlet, right side	•	•
Radio (with AUX, Bluetooth and USB connection)	•	•
Subwoofer	•	•
Steering wheel knob	•	•
Sun blinds, rear windows	•	•
Sun blinds, side windows	•	•
Timer cab heating	•	•
Window, sliding, door	•	•
Universal door/ignition key	•	•
Remote door opener	•	•
Forward view mirror	•	•
Cab heater power outlet 240V	•	•
OptiShift transmission with Lock-up RBB	•	•
Diff lock front 100%, Limited Slip rear	•	•
Speed limiter	•	•
Wheel/axle seal guards	•	•
Service and maintenance	_	_
Automatic lubrication system	•	•
Automatic lubrication system for long boom	•	•
Grease nipple guards	•	
Oil sampling valve		•
Refill pump for grease to lube system  Tool kit		
Wheel nut wrench kit	•	
CareTrack, GSM, GSM/Satellite Telematics, Subscription		•
reicinatics, Subscription		

	L110H	L120H
Protective equipment		•
Belly guard front	•	•
Belly guard rear	•	•
Cover plate, heavy-duty, front frame	•	•
Cover plate, rear frame	•	•
Cover plate, front/rear axle	•	•
Cab roof, heavy-duty	•	•
Guards for front headlights	•	•
Guards for radiator grill	•	•
Guards for tail lights	•	•
Windows, side and rear guards	•	•
Windshield guard	•	•
Corrosion protection, painting of machine	•	•
Corrosion protection, painting of attachment bracket	•	•
Bucket Teeth protection	•	•
External equipment		
Cab ladder, rubber-suspended	•	•
Deleted front mudguards & wideners rear	•	•
Fire suppression system	•	•
Mudguards, full cover, rear for 80-series tires	•	•
Mudguards, full cover, rear for 65-series tires	•	•
Long boom	•	•
Tow hitch	•	•

	L110H	L120H
Other equipment		•
CE-marking	•	•
Comfort Drive Control (CDC)	•	•
Counterweight, logging	•	•
Counterweight, signal painted, chevrons	•	•
Secondary steering with automatic test function	•	•
Sound decal, EU	•	•
Sound decal, USA	•	•
Reflecting stickers (decals), machine contour	•	•
Reflecting stickers (stripes), machine contour Cab	•	•
Noise reduction kit, exterior	•	•
Sign, slow moving vehicle	•	•
Sign, 50 km/h	•	•
Attachments		
Buckets: Rock straight or spade nose General purpose Re-handling Light material		
Wear parts: Bolt-on and weld-on bucket teeth Segments Cutting edge in three sections, bolt-on	•	•
Fork equipment	•	•
Material handling arm	•	•
Log grapples	•	•

#### SELECTION OF VOLVO OPTIONAL EQUIPMENT

#### Additional auxiliary hydraulics



Fire suppression system



Rehandling counterweight



External axle oil cooling



LED light packages



Long boom



Not all products are available in all markets. Under our policy of continuous improvement, we reserve the right to change specifications and design without prior notice. The illustrations do not necessarily show the standard version of the machine.

